

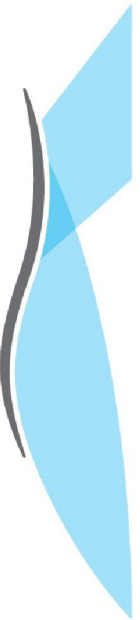
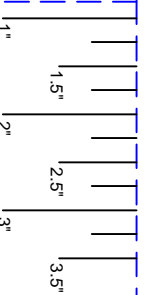
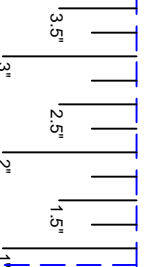
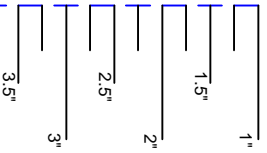


CUT ALONG DOTTED LINE

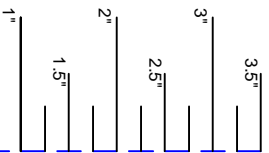


BRIGHTSHELF®

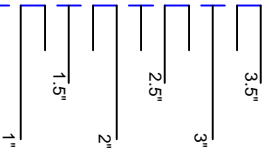

WHEN PRINTING THIS TEMPLATE, DO NOT SCALE OR FIT TO PAPER. IMAGE SHOULD BE CENTERED.



CUT HERE FOR FACE MOUNTED LEFT END CONDITIONS


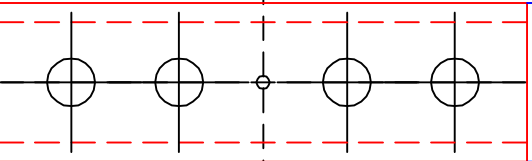


CUT HERE FOR FACE MOUNTED RIGHT END CONDITIONS

TEMPLATE FOR BRIGHTSHELF MOUNTING:
USE UPPER AND LOWER HOLES IF POSSIBLE.

CUT OUT HOLES IN TEMPLATE WITH SHARP BLADE. TAPE TEMPLATE TO MULLION, MATCHING UP LINES TO MULLION WIDTH. USE CENTER HOLE LOCATIONS TO MARK FOR MOUNTING HARDWARE. VERIFY SCALE OF TEMPLATE PRIOR TO MARKING HOLES.

VERIFY HEIGHT OFF FINISHED FLOOR AGAINST ALL MOUNTING LOCATIONS PRIOR TO DRILLING
BRACKETS SIZED FOR HARDWARE UP TO 1/4-20. HARDWARE.

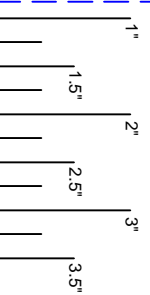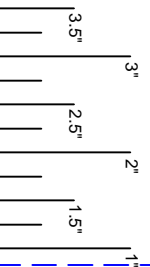

CUT ALONG DOTTED LINE